

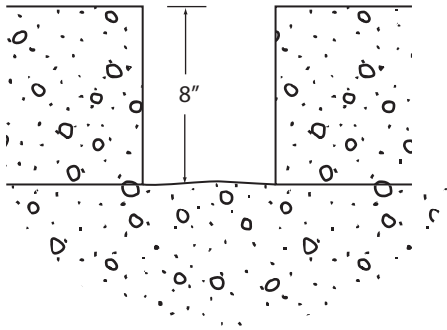
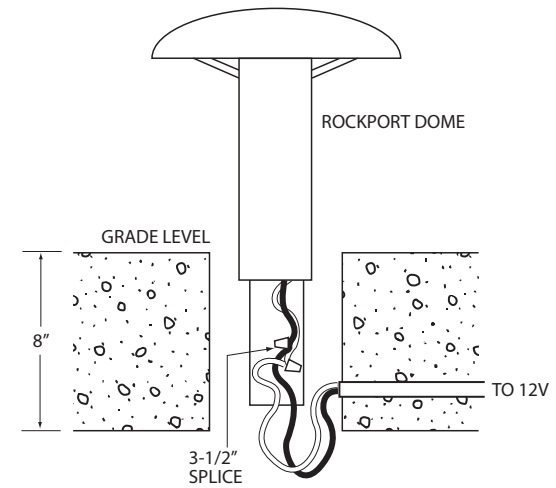


# Installation Instructions - Rockport Dome LED


1. Dig a 8"D x 10"W deep hole below grade level.

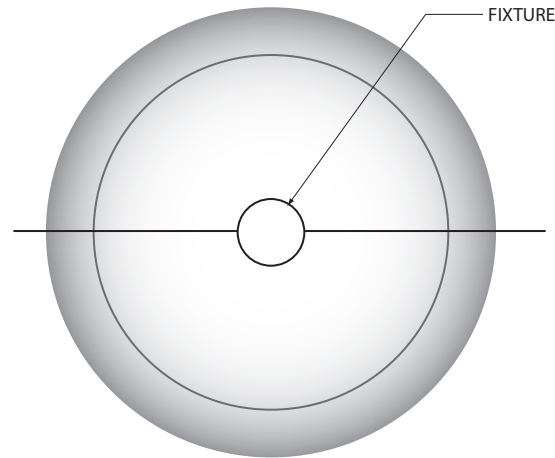

2. Run low-voltage wires into center of hole from 12V approved UL listed landscape transformer

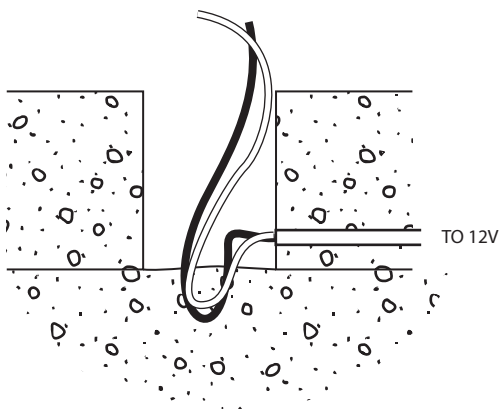

3. Slide 3" dia. x 19" long ABS tube into hole. 9" of tube should be sticking out of the ground. Back fill hole after wire is run.

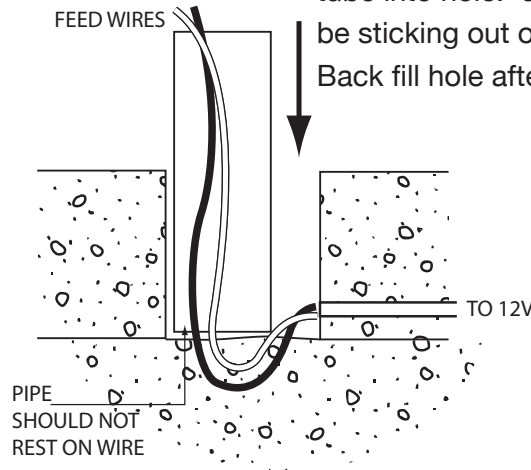

4. Splice wires from fixture to feed wires from ABS tube.  
**NOTE: Use waterproof wire nuts to terminate connections.**

