



Aztec Bollard Mounting Instructions

Turn off all power before beginning mounting process.


1. Create concrete base for mounting Aztec Bollard fixture.

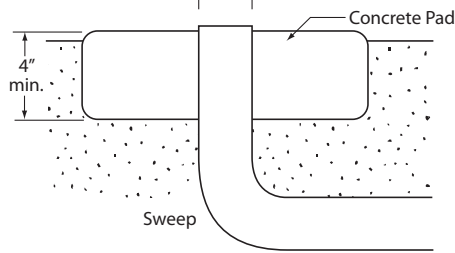


2. Leave 12" of low voltage wire outside of 2" pipe coming up from the concrete pad. You will need this length to hook up fixture.

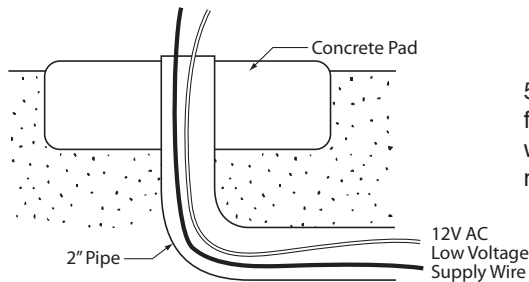


3. Position fixture base over center hole in pad and mark the spots where the 1/4-20 bolt holes need to be drilled, using the fixture base as a guide. See base detail drawing on back.

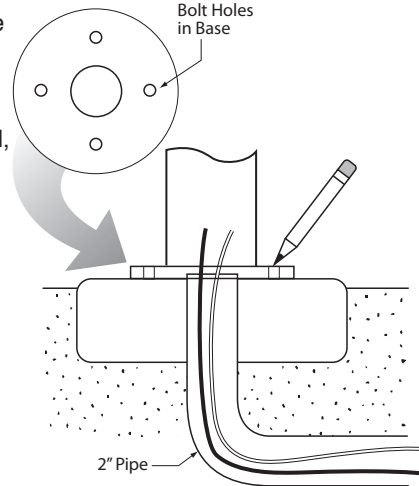


4. Install concrete machine screw anchors in concrete to accept 1/4-20 flat head screws.

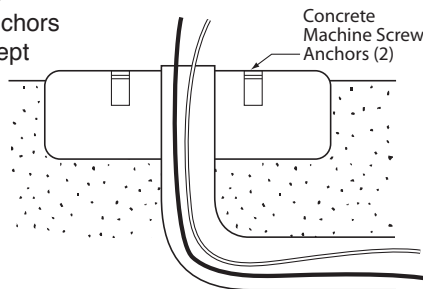


5. Splice wires from fixture using waterproof wire nuts

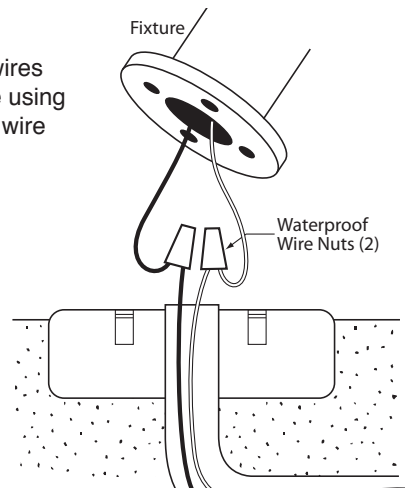

6. Push wires up inside of fixture tube. Using 1/4-20 flat head screws, attach base to concrete pad.

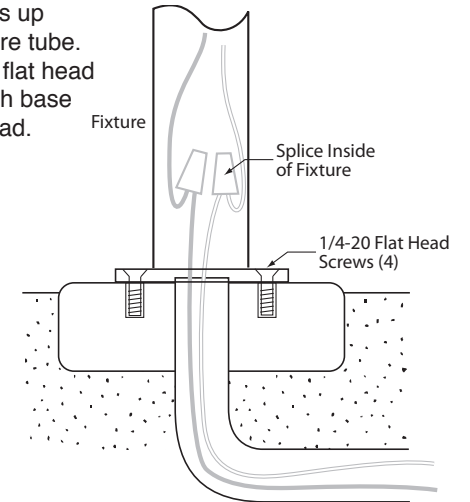

7. Provide 12V AC or DC power to fixture.

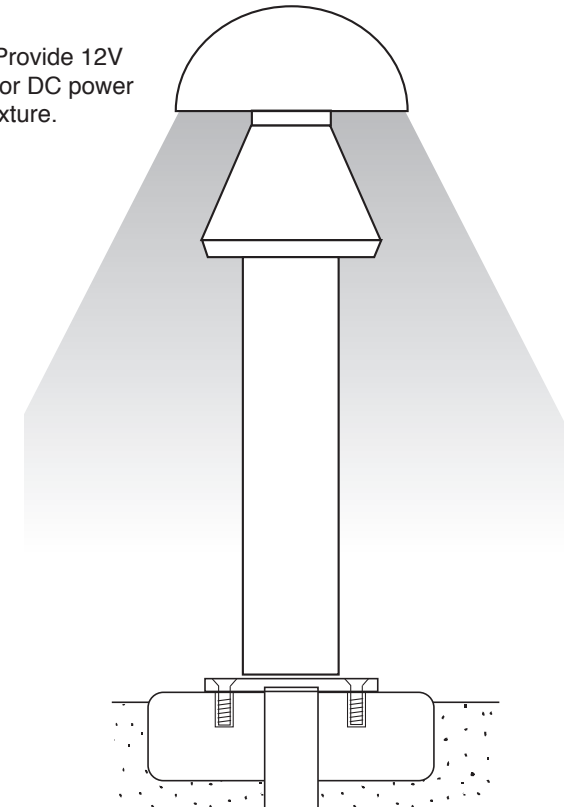

Aztec Bollard Mounting Instructions

